

ORIFICE TUBE ADAPTER KIT INSTALLATION PROCEDURE

1973 - 1975 GM CCOT Systems

The enclosed adaptor allows for use of the new type Orifice Tube on all 1973 through 1975 General Motor CCOT Systems.

1. Remove and discard the original Brass Orifice Tube which is no longer available.
2. Install Plastic Orifice Tube into adaptor, as shown in Figure 1.
3. Install adaptor and tube into evaporator.
4. Reconnect line, replace accumulator, evacuate and recharge.

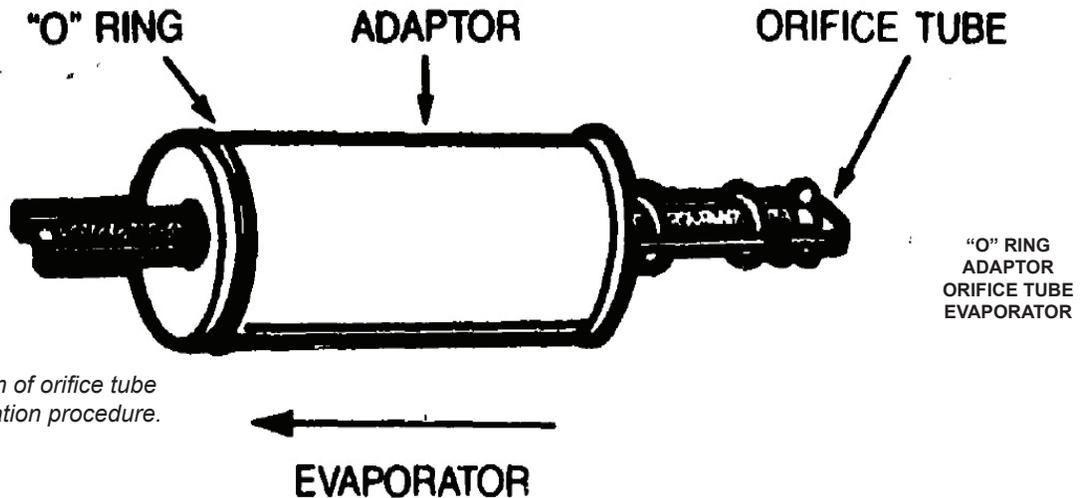


Figure 1. Diagram of orifice tube adapter kit installation procedure.