

INSTRUCTION SHEET

Jeep CJ Series Wrangler Only

Equipment

- 3.50" Hole Saw
- 1.125" Hole Saw
- Drilling Template

REMOVAL


- Remove battery
- Remove battery tray
- Remove (if equipped) A/C Unit
- Remove Heater Unit

NOTE: To install the new, larger blower motor, the hole in the fire wall must be enlarged.

- Install drilling template on engine side of fire wall, using the upper and lower heating house holes
- Using a 3.50" hole saw, enlarge hole at point A as shown on drawing 1
- Using a 1.125" hole saw, enlarge hole at point B as shown on drawing 1
- Apply a thin layer of rust-inhibiting paint to the exposed edges

NOTE: It is very important to seal the larger opening around the motor and electrical connection.

- Installation is the reverse of removal

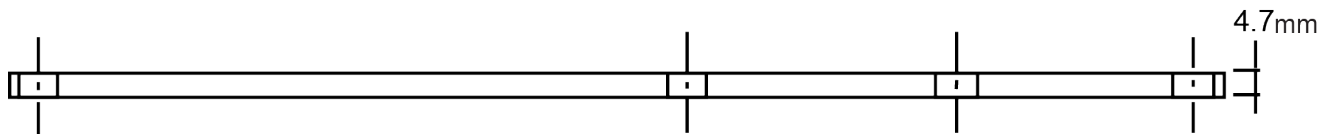

Material: Aluminum
Thickness: 4.75 mm

